



OUTDOOR FIREPLACE HOOD INSTALLATION INSTRUCTIONS

HS36 - 36" OUTDOOR FIREPLACE HOOD

HS42 - 42" OUTDOOR FIREPLACE HOOD

1. Remove protective film from stainless hood.
2. Align three notches located on back side of hood with front face of fireplace (see Figure). Notches should be at least 2" up from edge of fireplace opening.
3. Hold fireplace hood in place. Using a #34 (0.11 dia.) drill bit, drill through 3 notches.
4. Insert 3 screws through notches in hood into holes in fireplace.

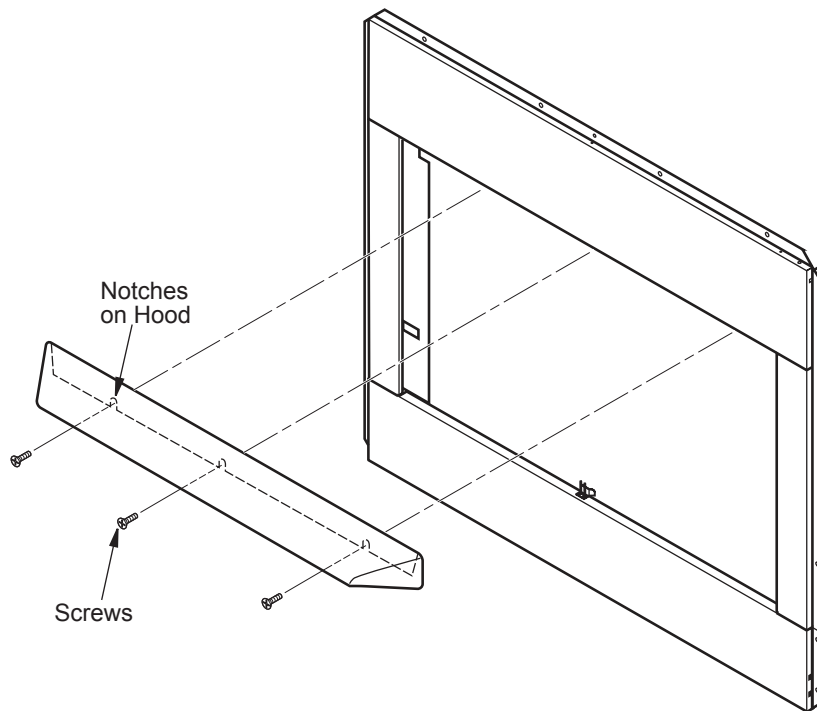


Figure - Installing Hood



121311 01
NOT A UPC

DESA
HEARTH PRODUCTS
2701 Industrial Drive
P.O. Box 90004
Bowling Green, KY 42102-9004
www.desatech.com

121311-01
Rev. A
03/07