


Cold Choke Adjustment Instructions for Vent-Free Gas Products

The bi-metal cold choke on your unit's pilot assembly opens and closes with the temperature, much like the choke on a car. If the cold choke opens too far, an excessive amount of air will flow through the pilot and cause it to be unstable. This will cause the thermocouple to cool and the unit will shut off. If your vent-free unit is shutting down after a short period of time or if the pilot is going out when the unit cycles back to pilot on thermostat units, you may need to make an adjustment to the bi-metal cold choke.

The process for adjusting the cold choke is as follows:

1. Hold the half-moon shutter tight against the pilot assembly .
2. Using pliers, squeeze the bi-metal strip (strip is bent in a "U" shape much like a money clip) together until there is an 1/8" gap.
3. The half-moon shutter must sit tight against the pilot assembly when adjustment is complete.

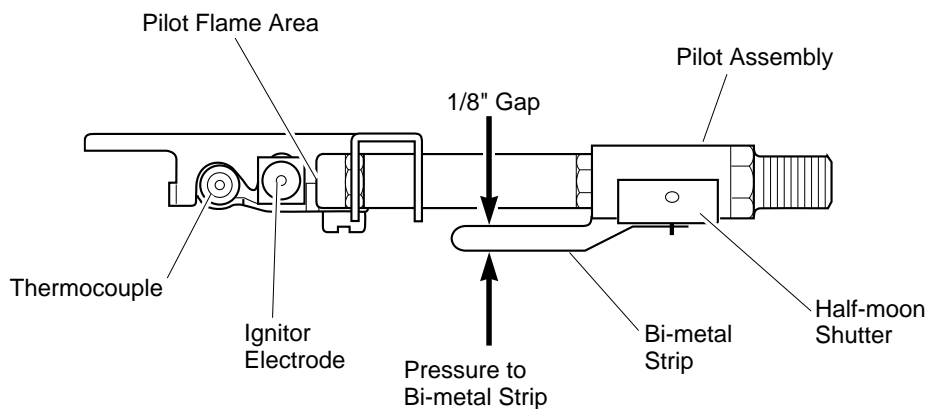

This adjustment process must be completed after maintenance or cleaning has been performed to insure proper setting of the cold choke.

Note: On some newer gas log products, a round spring clip might be in place around the cold choke. This spring must be removed prior to adjustment and replaced after adjustments have been made.

For more information on the care and maintenance of your unit, refer to your owner's manual, call DESA International at 1-866-672-6040, or visit our web page at www.desatech.com. You may also register your product on-line at this address.

DESA[™]
INTERNATIONAL

2701 Industrial Drive
P.O. Box 90004
Bowling Green, KY 42102-9004
www.desatech.com

108659-01
Rev. B
02/02